


# *FIBRE OPTIC CABLE BLOWING MACHINE SPARE PARTS*



1) Air Engine

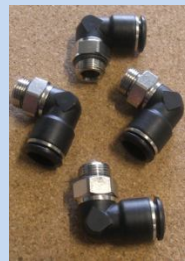

2) Air Engine  
Air Connectors



3) Palettes  $\varnothing 9\sim\varnothing 13$ /  
 $\varnothing 14\sim\varnothing 22$ / $\varnothing 6\sim\varnothing 11$ /  
 $\varnothing 12\sim\varnothing 18$ (1Set=2Pcs)



4) Cable Aligner  $\varnothing 9\sim\varnothing 13$ /  
 $\varnothing 14\sim\varnothing 22$ / $\varnothing 6\sim\varnothing 11$ /  
 $\varnothing 12\sim\varnothing 18$ (1Set=2Pcs)



5) Nutring  
(cable diameter  
must be given)



6) Exit Box Cable Seal (nutring outer diameter and thickness must be given)



7) O-ring (1Mt)



8) Exit Box Screws



9) Exit Box Nuts



10) Pressure gauge (Exit box pressure gauge/Palette pressure gauge/ motor pressure gauge)



11) Palette direction control valve (1Set)



12) Direction Control valve air connectors. (1Set)



13) Silencer ( Same for engine and direction control valve)



14) Air Conditioner (1 Set)



15) Air filter for air conditioner



16) Oil flow setter of motors



17) Water box



18) Oil box



19) Air exit connectors.



20) Air Preparation oil



21) Shock lubricant box oil level windows.



22) Shock lubricant box connection hose



23) WRENCH SET



24) Air pipes



25) Exit Box air mouth seal